

Electrolux

Factory Parts Catalog

Product No.	EI24EC15KS
Series	24" elec
Color	stainless
Market	North America
Wiring Diagram	305544105
Owner's Guide	318205608
Installation Instructions	318205403

 **Electrolux**

Electrolux Major Appliances

 
P.O. BOX 8020
CHARLOTTE, NC 28262

Publication No.
5995607420
12/02/02
(EN/SERVICE/ECL)
377

**24" ELECTRIC
COOK-TOP**

Model No.
EI24EC15K

CONTROL PANEL

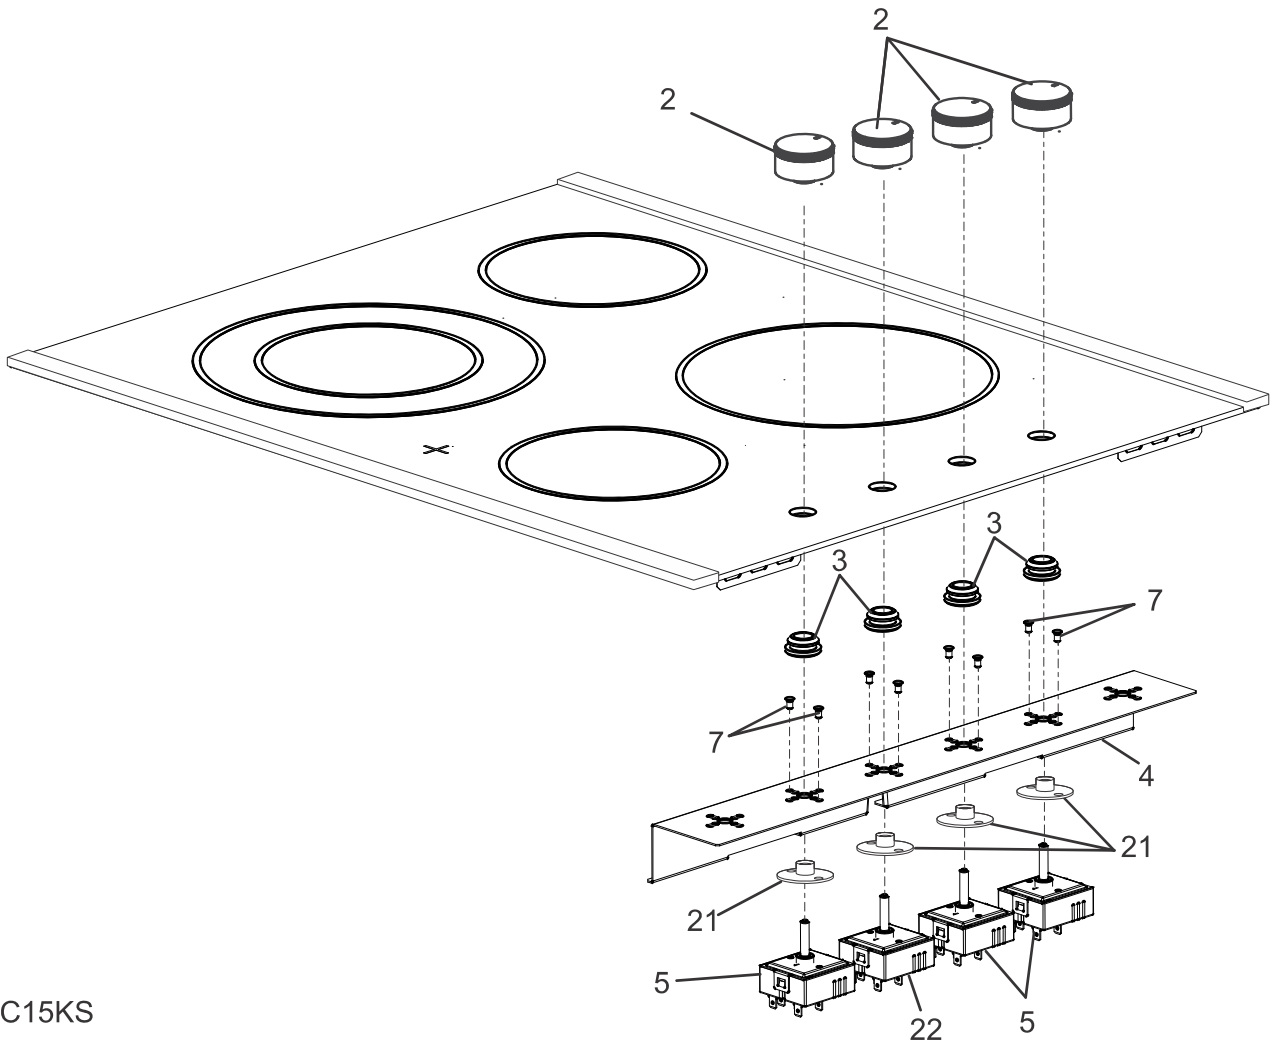


CEI24EC15KS

CONTROL PANEL

POS. NO	PART NO.	DESCRIPTION
2	305554800	Knob, control, black
3	387316100	Bushing, knob, sealing
4	387372600	Bracket, support, switch mtg
5 #	305458905	Switch, surface element
7	319224001	Screw, switch mtg., M4 x 7
21	318146010	Bushing, switch
22 #	305458904	Switch, surface element, dual

 MAIN TOP/SURFACE UNITS

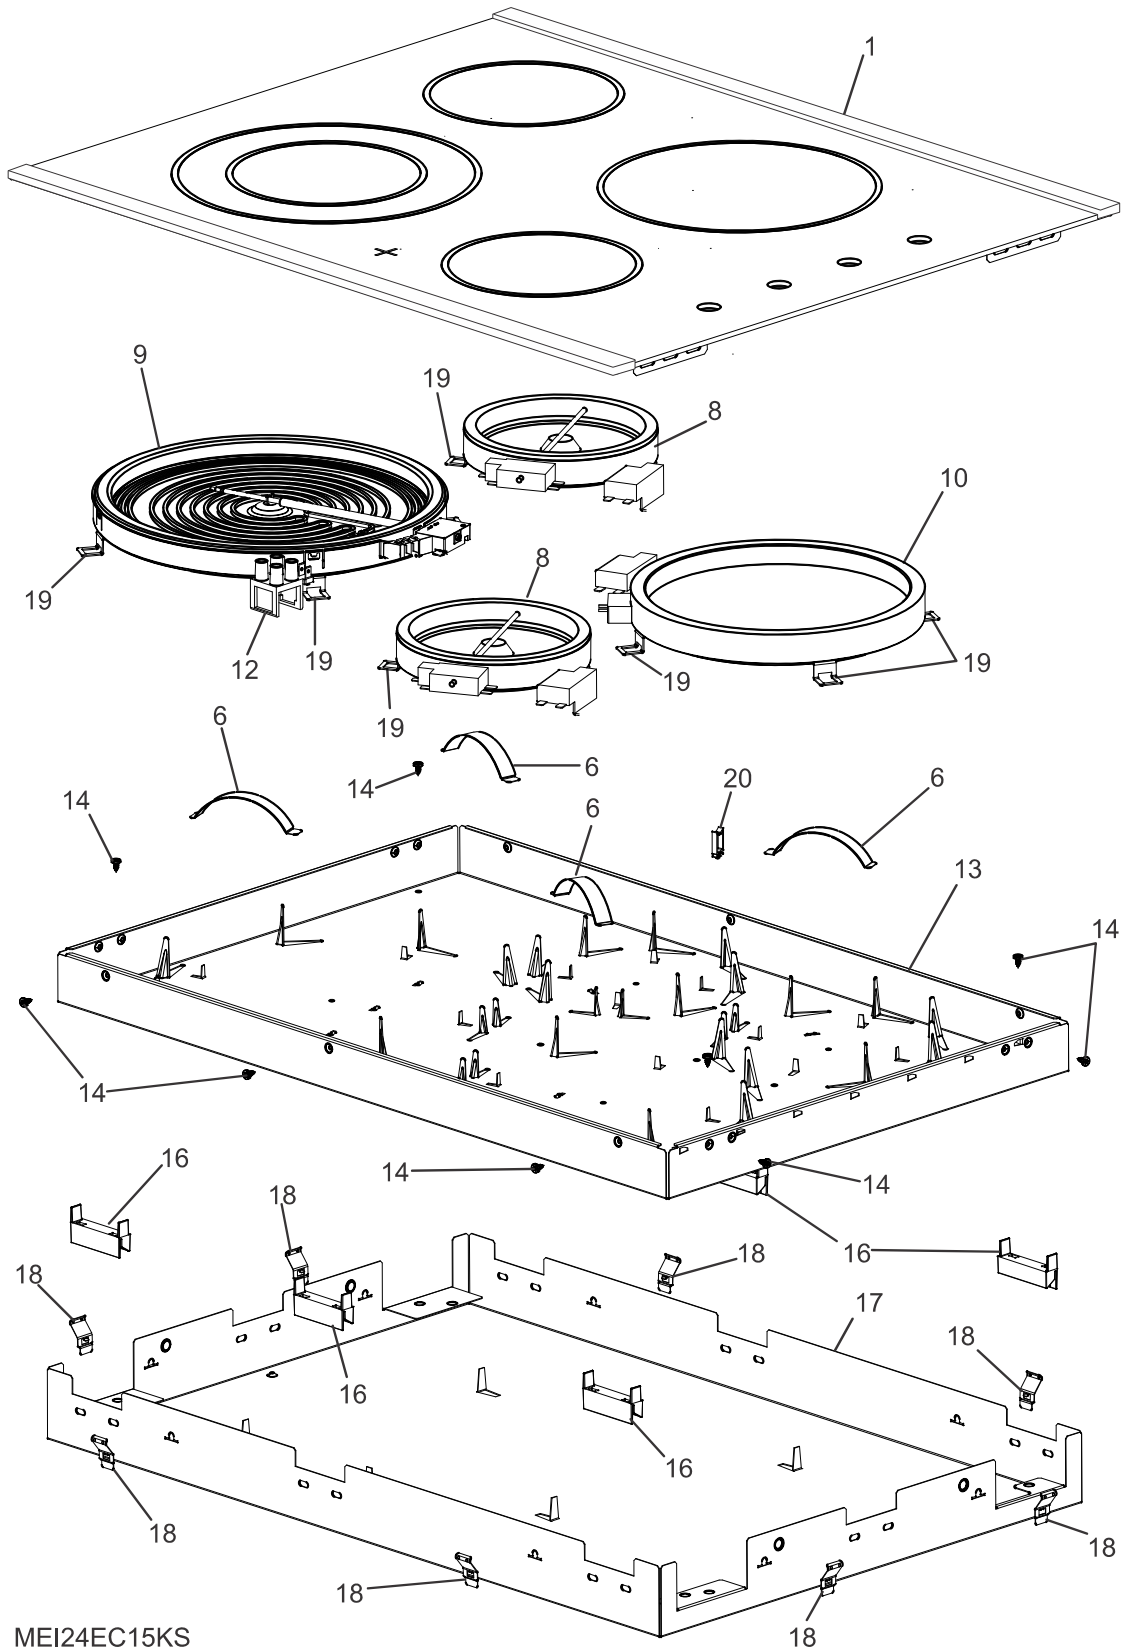

MEI24EC15KS

MAIN TOP/SURFACE UNITS

POS. NO	PART NO.	DESCRIPTION
1	305543513	Maintop Assembly, glass/frame, black/stainless
6	387372900	Spring, surface element
8 #	374063522	Element, surface, 6", 1200W
9 #	374064021	Element, surface, 5 ¹ / ₈ ", 750W/2200W
10 #	374063621	Element, surface, 7", 1800W
12 #	387812004	Light Assembly, indicator, hot surface
13	305554400	Box, inner
14	330447900	Screw, B4, 2 x 9, 5
16	387627600	Spacer, burner box, plastic
17	305554500	Box, outer
18	387174602	Bracket, spring, cooktop mtg.
18*	387627700	Bracket, retainer, cooktop
18*	305376102	Screw
18*	305309606	Screw
19	387683300	Bracket, surface element
19*	305376101	Screw, bracket, surface element
20	387727700	Retainer, wiring
* #	305500705	Box & wires assy
* #	305554600	Harness, wiring, main
*	305452800	Screw, ground
*	318163601	Cleaner-cooktop

WIRING DIAGRAM

