

























## GR2414CW/ GR2415CB/GR2416CSS Spare parts list

| Item No. | Picture   | Description              | Part code             | Qty per unit |
|----------|---|--------------------------|-----------------------|--------------|
| 1        |    | Backsplash assembly      | G24C01-011500-01 Assm | 1            |
|          |   |                          | G24C01-011500-02 Assm | 1            |
|          |   |                          | G24C01-011500 Assm    | 1            |
| 2        |   | Foot                     | G20C01-170500         | 4            |
| 3        |    | Control panel            | G24C01-030304-01      | 1            |
|          |   |                          | G24C01-030304-02      | 1            |
|          |   |                          | G24C01-030313         | 1            |
| 4        |    | Gas valve-Mid            | G20C01-030407         | 2            |
| 5        |   | gas valve-large          | G20C01-030406         | 1            |
| 6        |   | Gas valve-small          | G20C01-030402         | 1            |
| 8        |    | Knob                     | G20A14-030100         | 7            |
|          |   |                          | G20A14-030101         | 7            |
|          |   |                          | G20A14-030102         | 6            |
| 9        |    | Lamp switch              | C20C01-170800         | 1            |
| 10       |    | Regulator                | G20C01-034001         | 1            |
| 11       |   | Small burner cover       | G20A01-040000-3       | 1            |
| 12       |   | Small burner             | G20A01-040000-2       | 1            |
| 13       |   | Mid burner cover         | G20A01-040100-3       | 2            |
| 14       |   | Mid burner               | G20A01-040100-2       | 2            |
| 15       |   | Large burner cover       | G20A01-040200-3       | 1            |
| 16       |   | Large burner             | G20A01-040200-2       | 1            |
| 17       |  | Small NG injector        | G20A01-021202         | 1            |
| 18       |  | Small LPG injector       | G20A01-021200         | 1            |
| 19       |  | Mid NG injector          | G20A01-021206         | 2            |
| 20       |  | Mid LPG injector         | G20A01-021201         | 2            |
| 21       |  | Large NG injector        | G20A01-021224         | 1            |
| 22       |  | Large LPG injector       | G20A01-021203         | 1            |
| 23       |   | Oven/Broil valve         | G20C01-030600         | 1            |
| 24       |  | Oven/Broil injector base | G20A01-021100         | 2            |
| 25       |  | Oven injector NG         | G20A01-021224         | 1            |
| 26       |   | Broil injector NG        | G20A01-021213         | 1            |
| 27       |  | Oven injector LPG        | G20A01-021204         | 1            |
| 28       |   | Broil injector LPG       | G20A01-021202         | 1            |
| 29       |   | Regulator bracket        | G20C01-034500         | 1            |
| 30       |  | Cook top                 | G24C01-020103-01      | 1            |
|          |   |                          | G24C01-020103-02      | 1            |
|          |   |                          | G24C01-020103         | 1            |
| 31       |  | Pan support              | G24B02-021400         | 2            |
| 32       |  | Broil tray               | G20C01-215000         | 1            |

|    |   |                       |                      |   |
|----|---|-----------------------|----------------------|---|
| 33 |   | Broil grill           | G20C01-215100        | 1 |
| 34 |  | Rack                  | G24C01-071900        | 2 |
| 35 |   | Oven burner assembly  | G20A01-080100Assm    | 1 |
| 36 |   | Broil burner assembly | G20A01-090100Assm    | 1 |
| 37 |   | door seal             | G24C01-071200        | 1 |
| 38 |  | door Outer glass      | GC0026-100400        | 1 |
|    |   |                       | GC0027-100400        | 1 |
|    |   |                       | GC0027-100400        | 1 |
| 39 |   | door inner glass      | G24C01-100500        | 2 |
| 40 |   | door handle assembly  | G24A05-101900-02Assm | 1 |
|    |   |                       | G24A05-101900-02Assm | 1 |
|    |   |                       | G24A05-101900        | 1 |
| 41 |  | Door hinge            | G24C01-110000        | 2 |
| 42 |  | Hinge base(left)      | G20B01-101200        | 1 |
| 43 |  | Hinge base(right)     | G20B01-101300        | 1 |
| 44 |  | Drawer front          | G24C01-120100-01     | 1 |
|    |   |                       | G24C01-120100-02     | 1 |
|    |   |                       | G24C01-120100        | 1 |
| 45 |   | Drawer assembly       | G24C02-120200-01     | 1 |
|    |   |                       | G24C02-120200-02     | 1 |
|    |   |                       | G24C02-120200-04     | 1 |
| 46 |   | Drawer handle         | G20A01-120601        | 1 |
| 47 |   | Anti-tip bracket      | G20A01-212500        | 1 |