

Binary™ 1ENDZ RG6 Cable with Tool-less RCA

•BT-1ENDZ-RCA-1

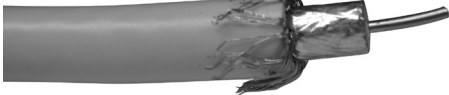
•BT-1ENDZ-RCA-3


EQUIPMENT & TOOLS REQUIRED


- One BT-1ENDZ-RCA-X (1M or 3M)
- Cable stripping tool


INSTALLATION INSTRUCTIONS

- 1 Cable Strip wire and pull back braiding over cable jacket. Approximately 3/8 inch of bare copper should be visible, and 3/8 inch of visible dielectric.


- 2 Insert die-cast connector body and plastic sleeve over stripped end. Ensure plastic sleeve sits over the cable braiding.


- 3 Insert RCA connector head onto bare copper center and align the notch on the connector body to the RCA connector head.


- 4 While keeping the plastic sleeve notch inserted, screw the connector body onto the RCA connector head. There will be a 1mm (1/16in) gap for the colored band.


- 5 Add the colored band.

