

## Binary™ RCA Male Tool-less Connector for RG59 and RG6


### •BT-RCA-RG59RG6

#### EQUIPMENT & TOOLS REQUIRED

- One BT-RCA-RG59RG6, Binary™ RCA Male Tool-less Connector
- Cable (either RG59 or RG6)
- Cable stripping tool

#### INSTALLATION INSTRUCTIONS


- 1** Cable Strip wire and pull back braiding over cable jacket. Approximatley 3/8 inch of bare copper should be visible, and 3/8 inch of visible dielectric.

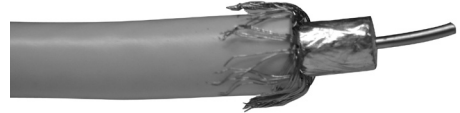

- 2** The package included two sizes of plastic sleeves. Use the white connector for RG6 cable, and the black connector for RG59 cable. Insert the correct die-cast connector body and plastic sleeve over stripped end. Ensure plastic sleeve sits over the cable braiding.



- 3** Insert RCA connector head onto bare copper center and align the notch on the connector body to the RCA connector head.

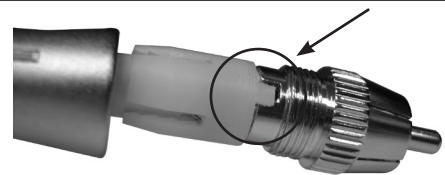

- 4** While keeping the plastic sleeve notch inserted, screw the connector body onto the RCA connector head. There will be a 1mm (1/16in) gap for the colored band.



- 5** Add the colored band.

